

Installation Instructions

IMPORTANT: SAVE FOR THE LOCAL ELECTRICAL INSPECTOR'S USE

DG 4082

DG 4084

DG 4086


DG 4088

To prevent accidents
and machine damage
read these instructions

before

installation or use.

IMPORTANT SAFETY INSTRUCTIONS

 **WARNING** - Read all instructions before installation or use of the steam oven to prevent injury and machine damage.

► Before installation make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent injury and machine damage. Consult a qualified electrician if in doubt.

► Installation, repair and maintenance work should be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and may void the warranty.

► Before installation or service, disconnect the power supply to the work area by removing the fuse, "tripping" the circuit breaker or switching off the power main. Ensure that power is not restored to the appliance during maintenance or repair work.

► Do not use an extension cord to connect this appliance to electricity. Extension cords do not guarantee the required safety of the appliance, (e.g. danger of overheating).

► Do not operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.

► Inspect the steam oven for shipping damage. Do not install or operate a damaged unit. Contact the place of purchase.

► The steam oven should be installed at a safe height for users to safely access all cooking levels and containers.

► This appliance must not be used in a non-stationary location (e.g. on a ship).

IMPORTANT SAFETY INSTRUCTIONS

► This steam oven is designed for installation in cabinetry or beneath a countertop. This is necessary to ensure that all electrical components are shielded.

► Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.

► Do not tamper with electrical connections and components or mechanical parts. Never open the outer casing of the appliance.

Note to the installer:

Please leave these instructions with the consumer of the appliance for the local building inspectors use.


SAVE THESE INSTRUCTIONS

Appliance and cut out dimensions

Miele appliances can be installed flush or proud. Discuss your installation requirements with your architect, designer and installer.

DG 4082 / DG 4088

Installation in a tall cabinet

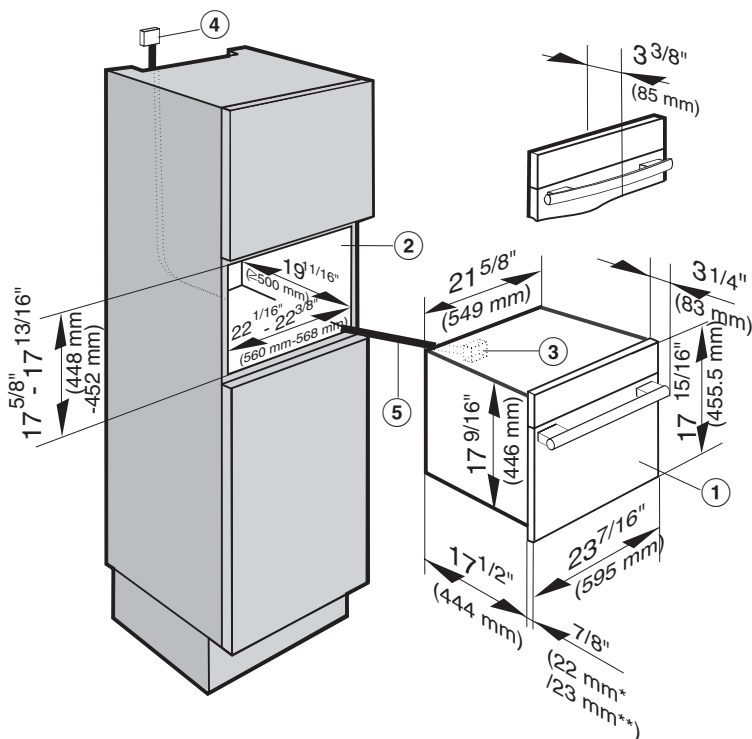

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box

This should be accessible after the appliance has been installed.


⑤ Power cord

* Machine with glass front

** Machine with stainless steel front

Appliance and cut out dimensions

Installation under a countertop

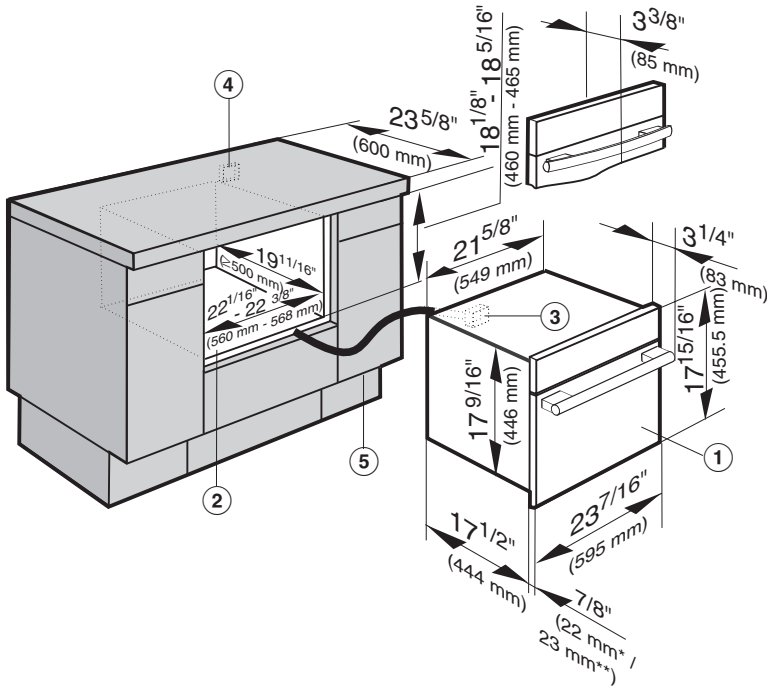

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box


This should be accessible after the appliance has been installed.

⑤ Power cord

* Machine with glass front
** Machine with stainless steel front

Appliance and cut out dimensions

Installation above a Miele oven

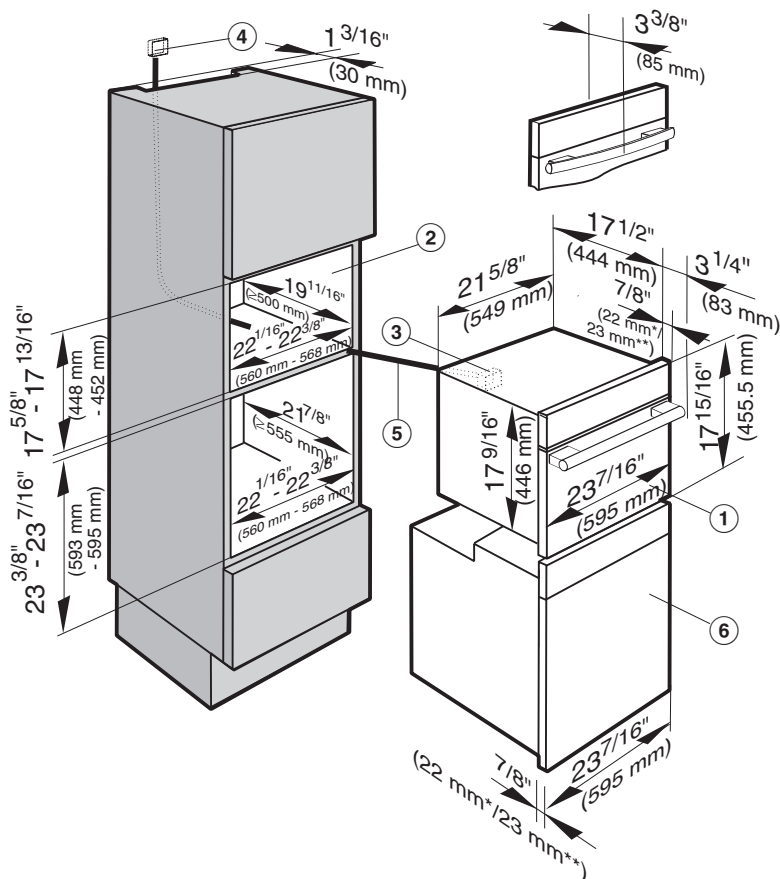

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box

This should be accessible after the appliance has been installed.

⑤ Power cord


⑥ Oven

* Machine with glass front

** Machine with stainless steel front

DG 4084 / DG 4086

Installation in a tall cabinet

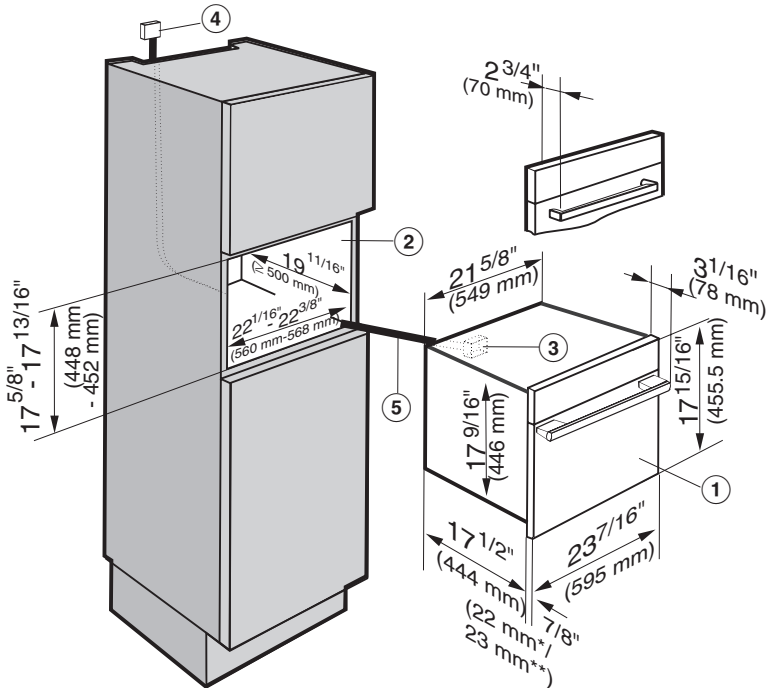

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box


This should be accessible after the appliance has been installed.

⑤ Power cord

* Machine with glass front
** Machine with stainless steel front

Appliance and cut out dimensions

Installation under a countertop

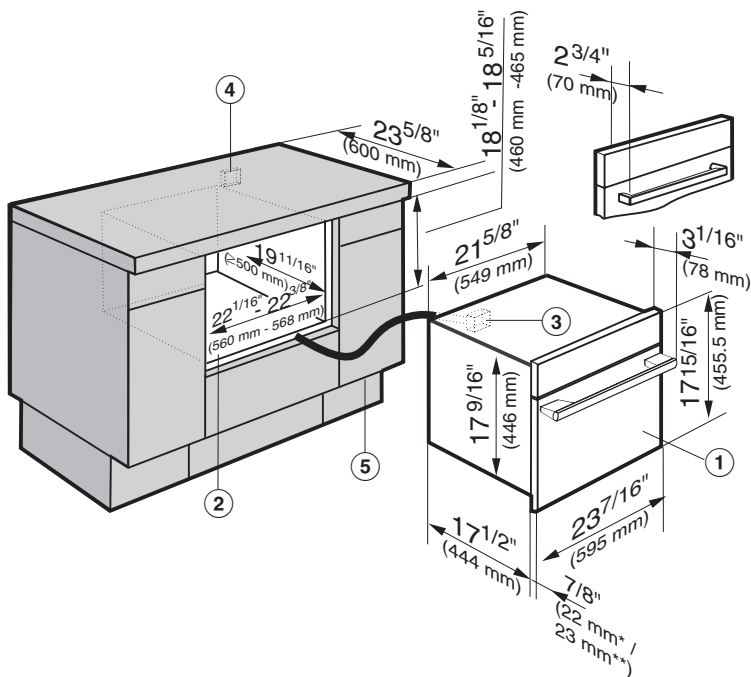

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box


This should be accessible after the appliance has been installed.

⑤ Power cord

- * Machine with glass front
- ** Machine with stainless steel front

Appliance and cut out dimensions

Installation above a Miele oven

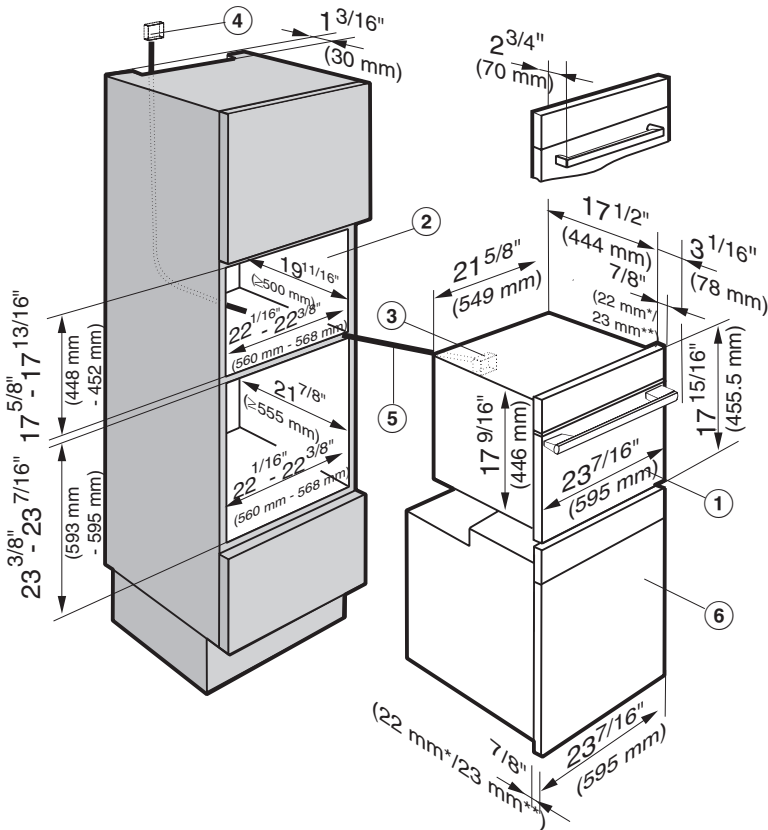

① Steam oven

② Cabinet opening

③ Terminal block

④ Outlet or junction box


This should be accessible after the appliance has been installed.

⑤ Power cord

⑥ Oven

* Machine with glass front
** Machine with stainless steel front

Installation

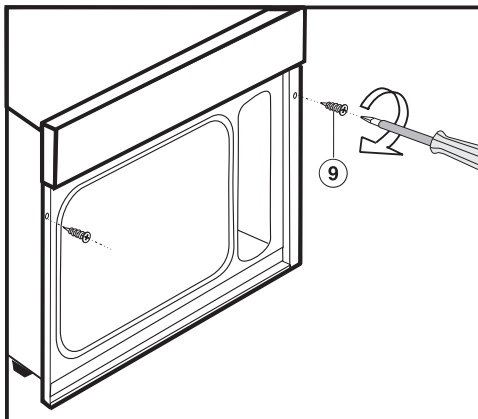

- Push the appliance into the niche. After aligning the oven it must be secured in position. Open the oven door and using the two supplied screws ⑨, secure it to the cabinet through the holes on either side of the vertical oven trim.

Installation, repairs and other work by unqualified persons could be dangerous.

The appliance comes equipped with a 6 ft (1.8 m) power cord with a NEMA 6-15P molded plug for connection to a 240 V, 15 A, 60 Hz power supply.

Connection should be made via a suitable isolator, with an on-off switch which should be easily accessible for servicing work.

Verify that the voltage, load and circuit rating information found on the data plate, match that of the household electrical supply before installing the appliance.

If there is any question concerning the electrical connection of this appliance to your power supply, please consult a licensed electrician or call Miele's Technical Service Department.

 1-800-999-1360

 1-800-565-6535

Caring for our environment

Disposal of packing material

The transport and protective packing materials are environmentally friendly for disposal and may be recyclable.

Ensure that any plastic wrap is disposed of safely and kept out of the reach of children. Danger of suffocation! Danger of suffocation!

Disposal of an old appliance

Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Before disregarding an old appliance ensure that it presents no danger to children while being stored for disposal. Unplug it from the outlet, cut off its power cord and remove any doors to prevent hazards.

**Please have the model and serial number
of your appliance available before
contacting Technical Service.**



U.S.A. Miele, Inc.

National Headquarters

9 Independence Way
Princeton, NJ 08540
Phone: 800-843-7231
609-419-9898
Fax: 609-419-4298
www.mieleusa.com

Technical Service & Support Nationwide

Phone: 800-999-1360
Fax: 888-586-8056

TechnicalService@mieleusa.com

Canada Miele Limited

Headquarters and Showroom

161 Four Valley Drive
Vaughan, ON L4K 4V8
Phone: 800-643-5381
905-660-9936
Fax: 905-532-2290
www.miele.ca
professional@miele.ca
(commercial enquiries)

MieleCare National Service

Phone: 800-565-6435
905-532-2272
Fax: 905-532-2292
customercare@miele.ca
(general and technical enquiries)

Germany

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh